

---

# CARE AND MAINTENANCE

---

## General Cleaning

Like any floor in your home, composite decking looks best when the surface is kept clean. Cleaning the deck with a stiff bristled brush should be undertaken on a regular basis. The frequency of cleaning would be based on the amount of debris that ends up on your deck from overhanging or nearby vegetation, as well as general dirt and grime that builds up from regular foot traffic.

We recommend using water and sugar or dish soap to wash your composite deck.



## Scratching

The machined finish and embossed pattern on the surface of ReDeck decking is designed to hide most minor scratches. When moving furniture or heavy items across your deck take extra care as this may lead to significant scratches on the deck surface. We recommend using a protective mat or furniture pads to prevent contact from items such as furniture legs, BBQ's or planter stands. Larger scratches can be removed by lightly sanding the face of the board. Please note that over sanding of your deck boards can remove the embossed pattern.

## Pressure washing

You can use a pressure washer that is no greater than 1500 PSI and it should not be applied closer than 30cm from the decking surface. Use a normal fan nozzle and not a dirt blaster type nozzle.

NOTE: The use of any cleaning product can and may affect the colour of your ReDeck. Always test any cleaning product in an hidden area of your deck before cleaning a large area.